



www.fisher-price.co.uk

N3985



GeoTraxTM
Transportation System

Fisher-Price®



Please keep this instruction sheet for future reference, as it contains important information.

Requires six "AAA" (LR03) alkaline batteries (not included).

Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).

Product features may vary from photographs.

**Visit www.fisher-price.co.uk
to see the entire world
of GeoTrax® accessories!**

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk.


Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City,
Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor,
Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817,
Fax: 03-78803867.

Assembled Parts

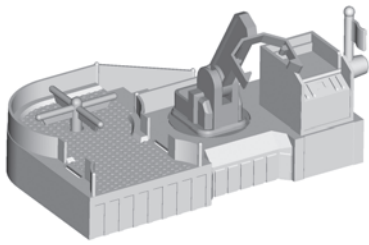


Baggage Platform




Awning




Security Gate

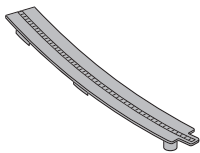


Air Track with Tabs

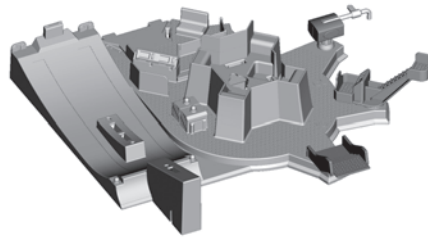

Terminal Base

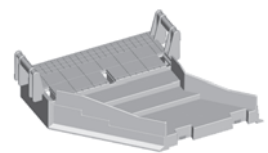

Loading Station

 


4 Air Tracks




Air Track with Support




Main Tower

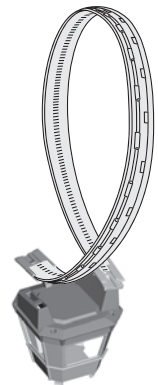


Traffic Control Top

 

2 Straight Tracks

 

4 Curved Tracks

 

Trestle Base



Trestle Post


Battery Installation



We recommend the use of **alkaline** batteries for longer battery life.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

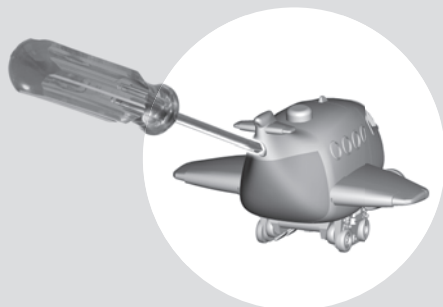

Airplane

- Locate the battery compartment on the back of the airplane.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Lower the battery compartment door and insert three "AAA" (LR03) **alkaline** batteries.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! Under normal use conditions, the batteries in the vehicle will require replacement more often than the batteries in the remote controller.



Remote Controller


- Locate the battery compartment on the bottom of the remote controller.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door and insert three "AAA" (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Assembly

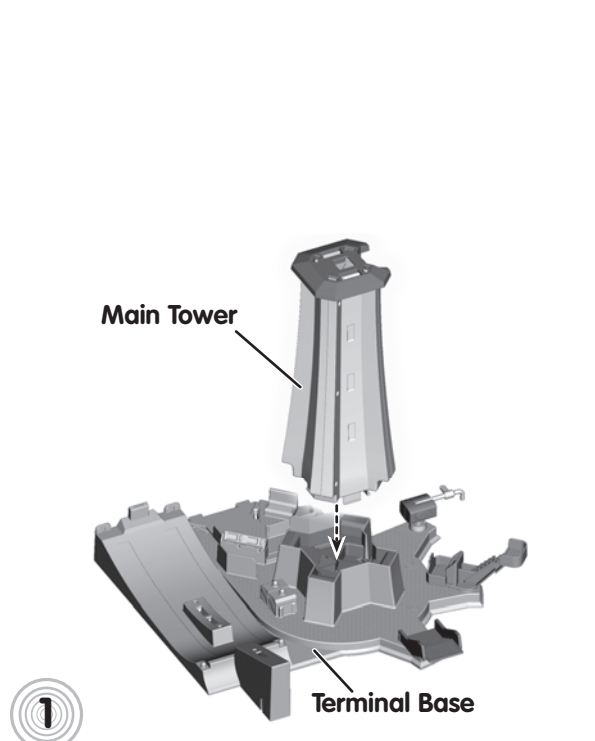


- “Snap” the main tower into the terminal base.

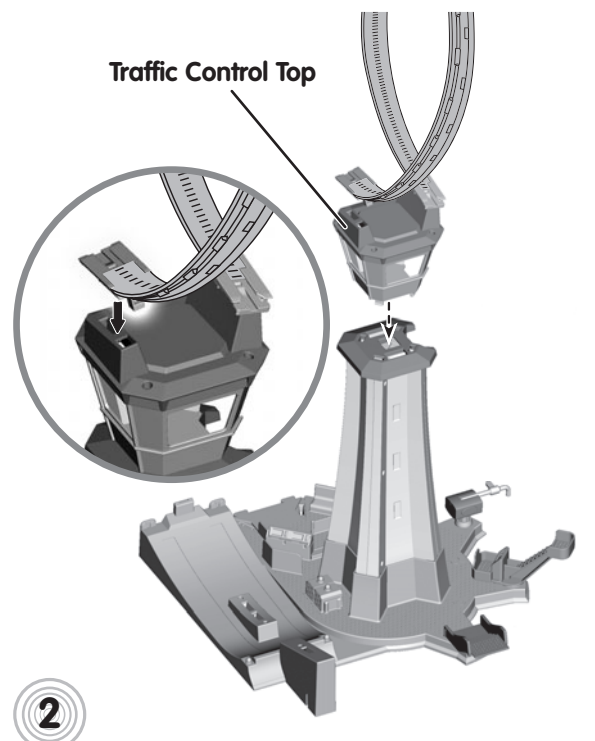


- “Snap” the traffic control top into the main tower.
- “Snap” the free end of the air track into the slots in the top of the control tower.

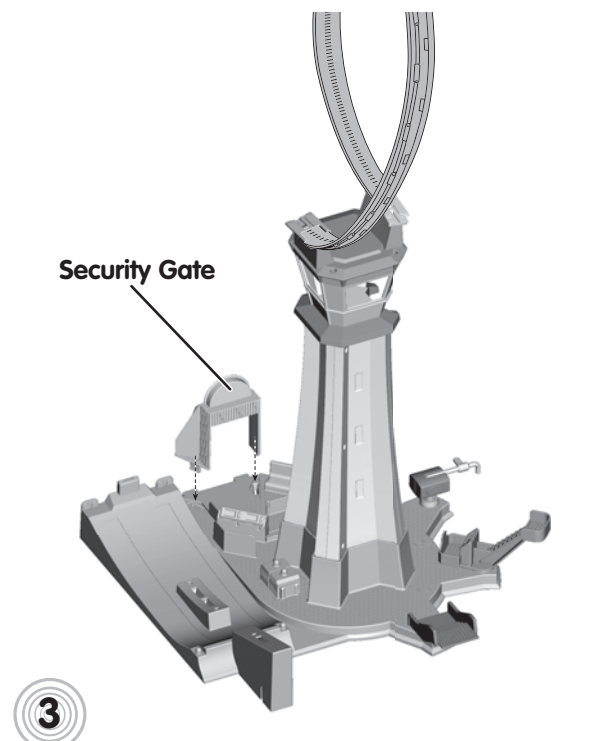


- “Snap” the security gate into the slots in the terminal base.

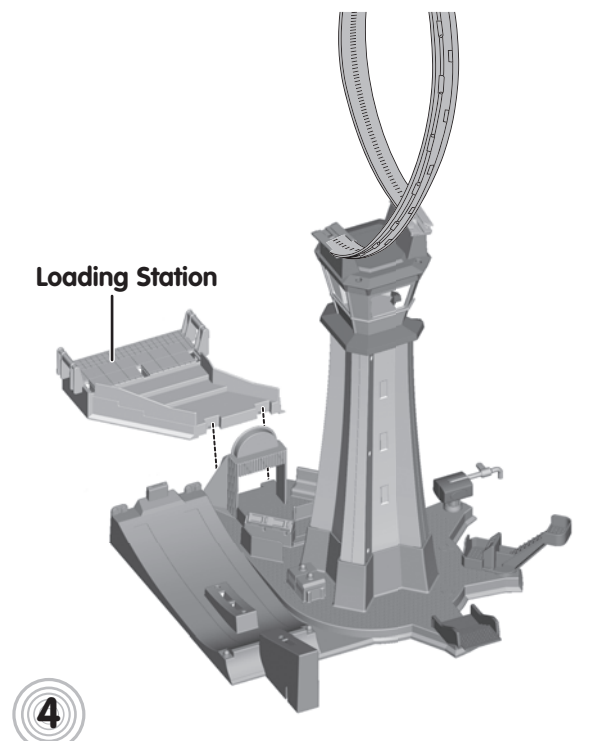


- Fit the loading station onto the terminal base.

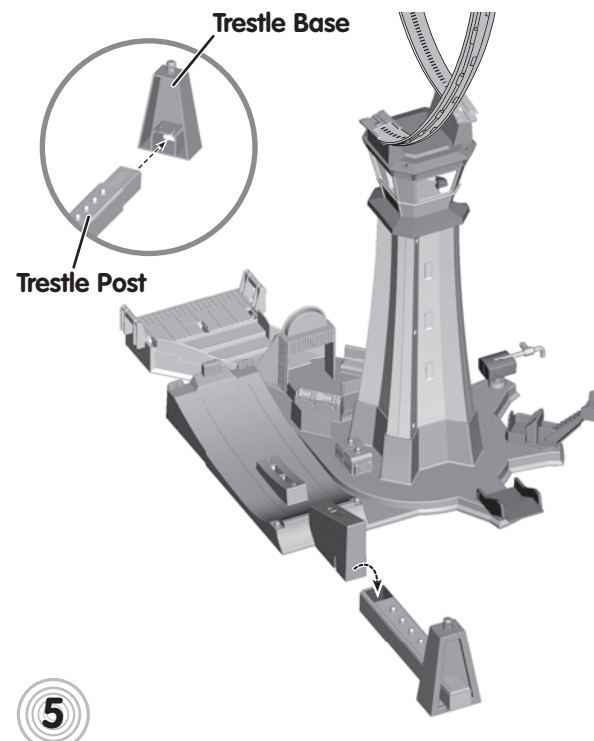


- Connect the trestle base to the trestle post.
- Lift the terminal base and lower to “snap” onto the trestle assembly, as shown.

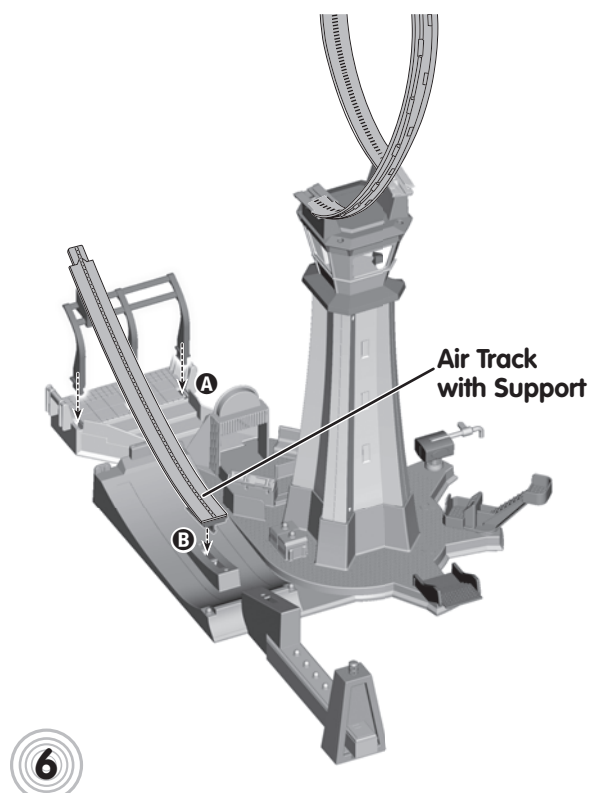


- Position the air track with support above the terminal base assembly.
- First, “snap” the ends of the support into the slots in the loading station **A**.
- Then, fit the tabs on the track into the slots in the terminal base **B**.

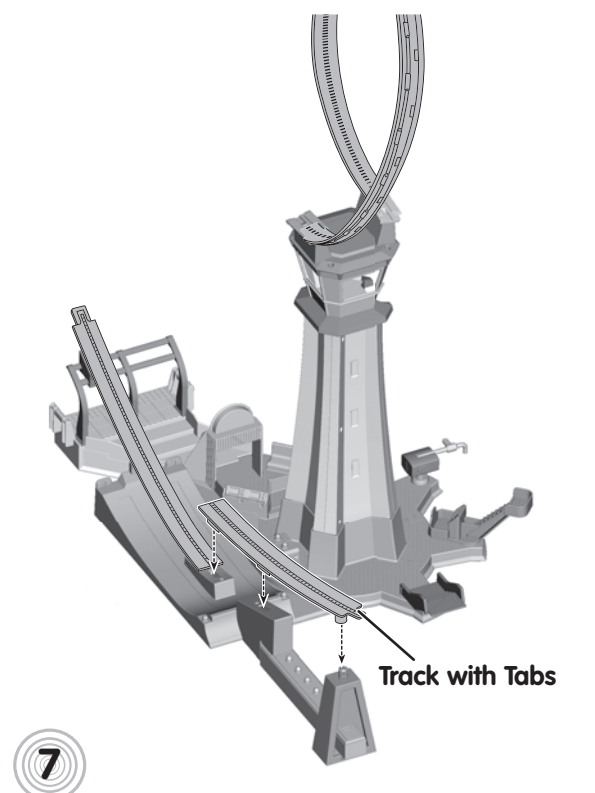


- Fit the track with tabs into the slots in the terminal and the trestle assembly. Push down to “snap” in place.

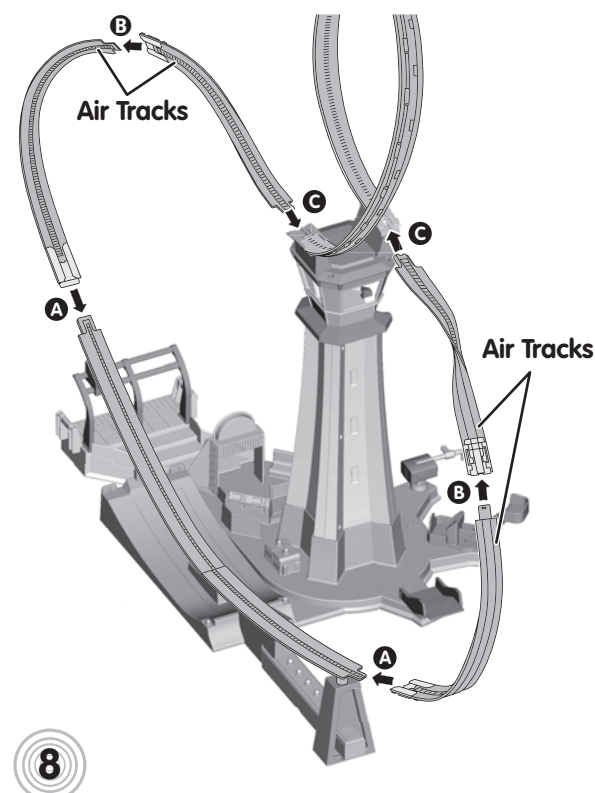

- Slide to attach an air track to each free end of the track on the base assembly **A**.
- Fit an air track onto each end of the track assembly **B**.
- Attach the remaining ends of the air track **C**.

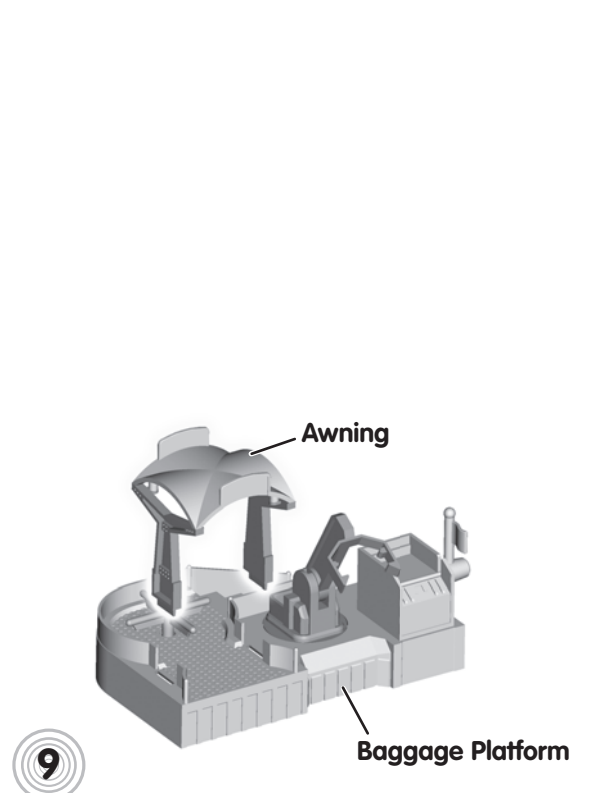


- “Snap” the awning into the baggage platform.

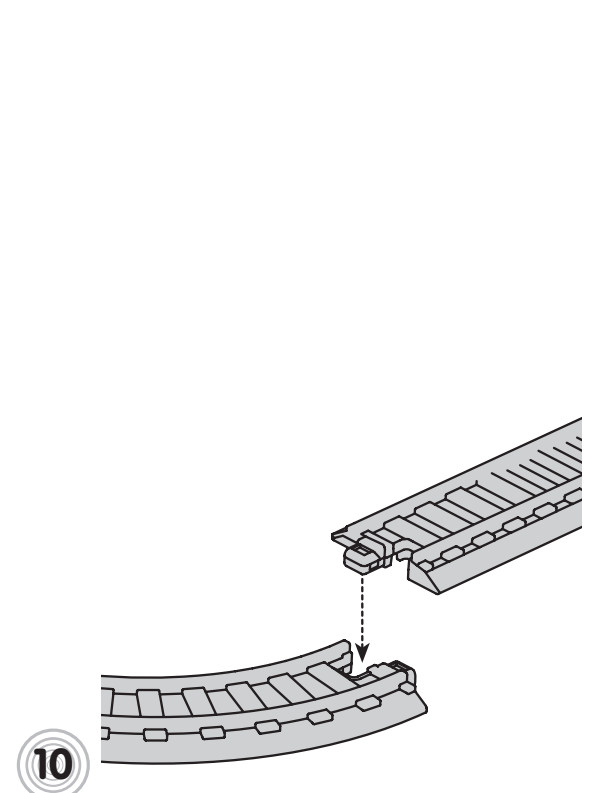

- Track pieces easily snap together.

■ Up, up and away!

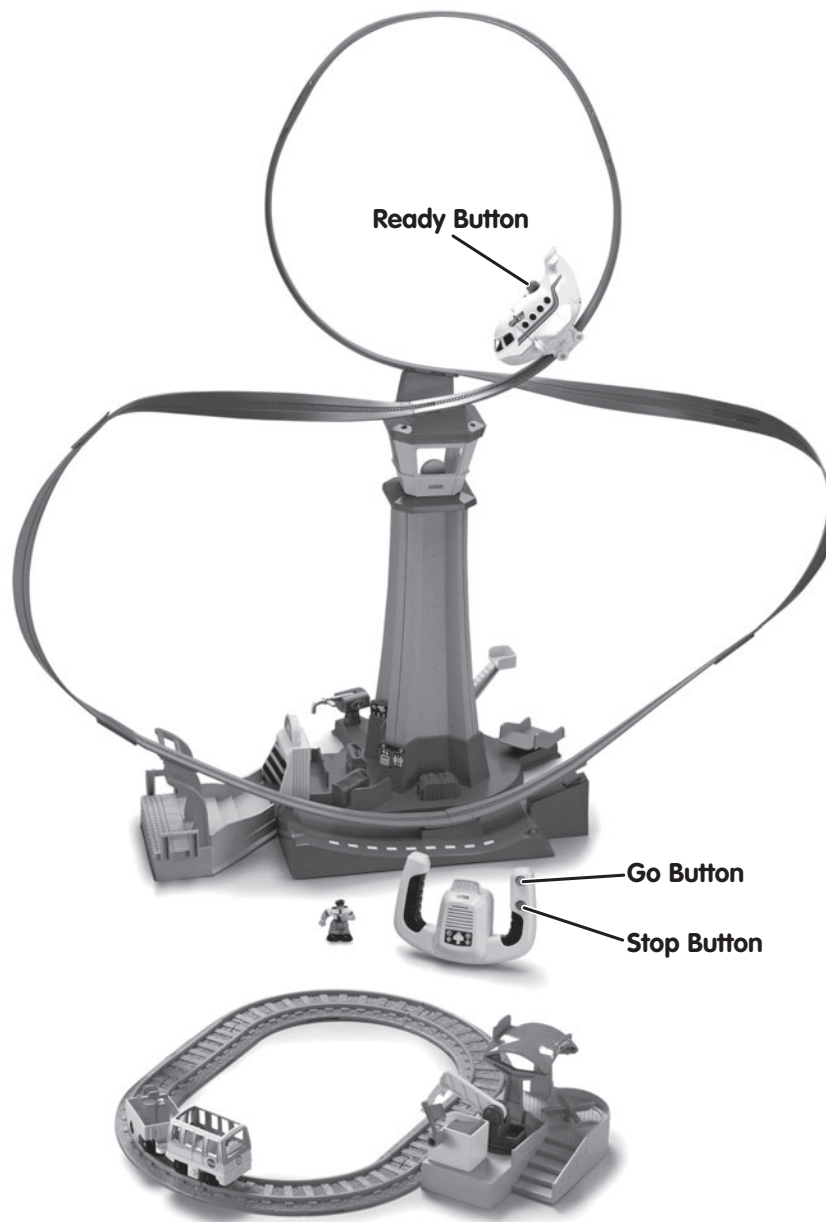

- Fit the airplane onto the track.
- Press the ready button on top of the airplane to turn it on. It's ready for take-off!
- Press the go button on the remote controller to start the airplane.
- Press the stop button on the remote controller to stop the airplane.

Note: The airplane will go into sleep mode after five minutes of inactivity. Press the ready button on top of the airplane to wake it up. Then press the go button on the remote controller to start the airplane.

- This toy works best if you have a clear path between the remote controller and the vehicle. Point the remote controller at the airplane. The maximum range of the remote controller is about 3,6 m (12 feet).

Care

- Wipe the toy with a clean, damp cloth. Do not immerse. Do not drop this toy on a hard surface.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Troubleshooting

SYMPTOM	SOLUTION
Airplane moves slowly	<p>Battery power in the airplane may be weak. Replace all three batteries in the vehicle with fresh, alkaline batteries.</p> <p>The wheels on the airplane may be dirty. Wipe them with a clean cloth.</p>
Airplane does not respond to the remote controller	<p>Battery power in the remote controller may be weak. Replace all three batteries in the remote controller with fresh, alkaline batteries.</p> <p>You may be beyond the maximum range of the remote controller which is about 3,6 m (12 feet).</p> <p>You may not have a clear path between the remote controller and the airplane. This toy works best when there are no obstructions between the airplane and the remote controller.</p> <p>Bright sunlight or fluorescent lights may affect the range of the remote controller. Try dimming the room you are playing in.</p> <p>The airplane may have shut off. If you do not operate the remote controller for a few minutes, the airplane shuts off automatically and the ready light turns off. Press the ready button on the airplane, and operate the remote controller to restart.</p>